



Flexitank Europe Bvba

Primeurstraat 15- 2100 Deurne-Antwerpen

Tel +32 (0)3.314.88.01

Fax +32 (0)3.366.16.90

Email info@flexitankeurope.be

URL www.flexitankeurope.be

Flexitank Loading Instructions

1. The container should be on level ground while loading.
2. The flexitank should be centred on the floor of the container.
3. Connect the flexitank fill hose to the loading hose by means of 2" or 3" Cam lock. The loading hose should be suspended by a rope from the top of the door latches to ensure there is no stress placed on the flexitank hose connection. All connections should be secured with tape.
4. Check bulkhead to ensure they are in place. Slide sides of bulkhead securely against container sides.
5. Close container's left-hand door firmly. **DO NOT OPEN THE LEFT-HAND DOOR AGAIN UNTIL TANK IS UNLOADED.**
6. Open valve and begin loading.
7. Always load a flexitank to full capacity. The payload capacity is always specified by Flexitank Europe. Under-loading can result in flexitank abrasion and damage.
8. Check fittings during loading to ensure they remain tight without leakage. Monitor hose connection to prevent undue strain on tank fitting and connection.
9. Keep sharp objects and tools clear of container. Do not carry any tools inside container while flexitank is loading or loaded.
10. When loading is complete, close valve and disconnect from plant hose. Cap valve and plant hose. Secure flexitank hose assembly to flexitank by fastening to valve saddle mounted to the left of the fill gland.
11. Any air in tank may be released by opening the valve to the air vent hose during bag filling. Extreme care should be taken that clothing is free of sharp buckles or tools before entering the container.
12. Close the right hand door and secure locks. Place warning tag in left hand door lock.